## MAINTENANCE

- The nozzle should be inspected before and after each use to ensure it in good operating condition.
- If you encounter the following situations, the nozzles should be taken out of service and repaired.
- (1) Controls that are either inoperable or difficult to operate.
- (2) Excessive wear.
- (3) Water leaks.
- (4) Broken spinning teeth.
- Periodically flushing the nozzle with clean water and remove the dirt from the nozzle.
- Regularly check the baffle screw to be sure it is tight enough.